

SCROLL SAW PATTERNS











This cut patterns is 1:1 scale,
you only need to stick it to the wood with the thickness that has been adjusted,
for assembly tutorial you can visit <https://www.youtube.com/c/kayunganjuk>

Ready to print

Email : kayunganjuk@gmail.com
Website : <https://kayunganjuk.com>
Instagram : <https://www.instagram.com/kayunganjuk>
Pinterest : <https://id.pinterest.com/kayunganjuk>
Facebook : <https://www.facebook.com/ibadasrof>
Youtube : <https://www.youtube.com/c/kayunganjuk>

**Pattern for personal use only.
Copyright by Ibadasrof**

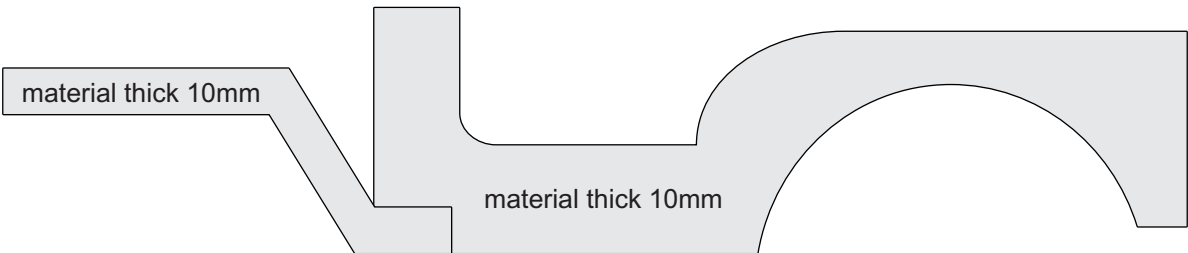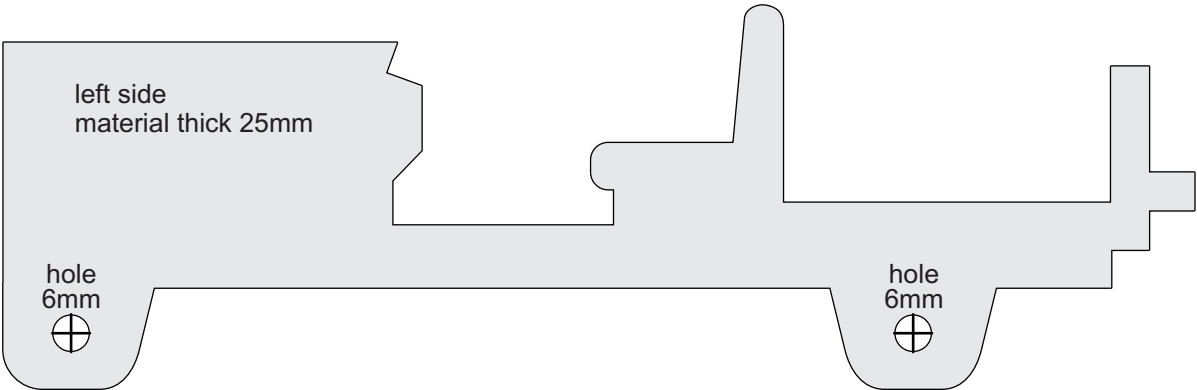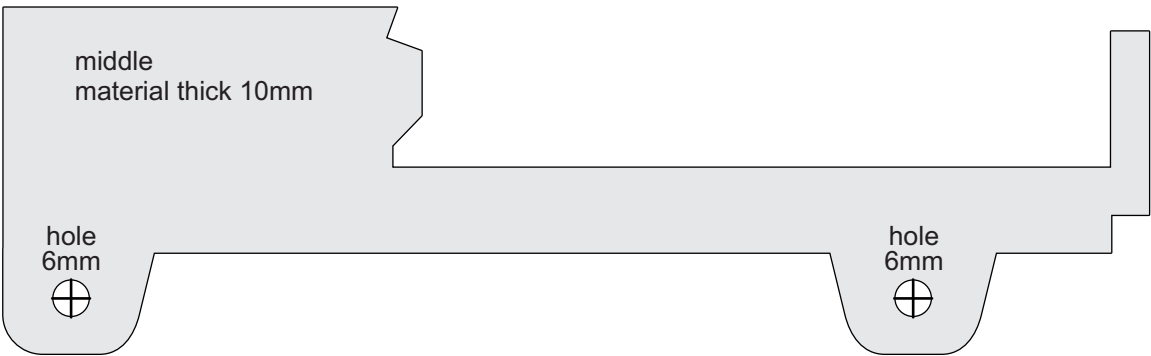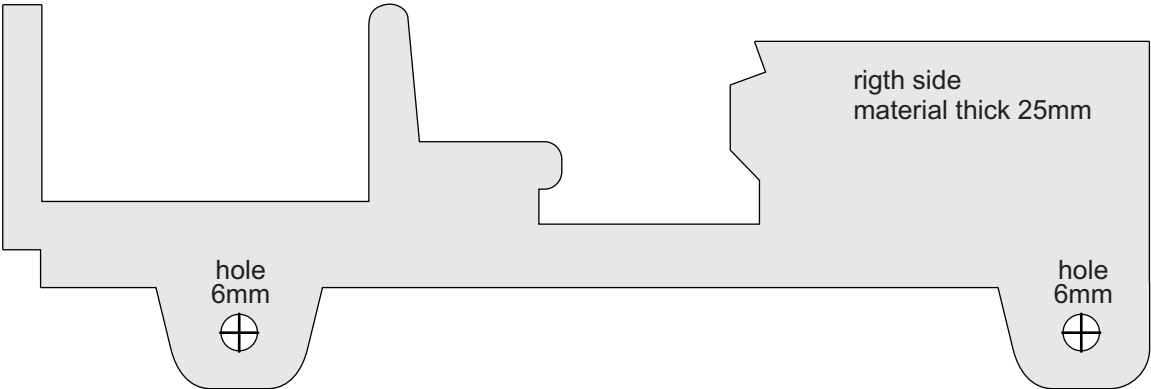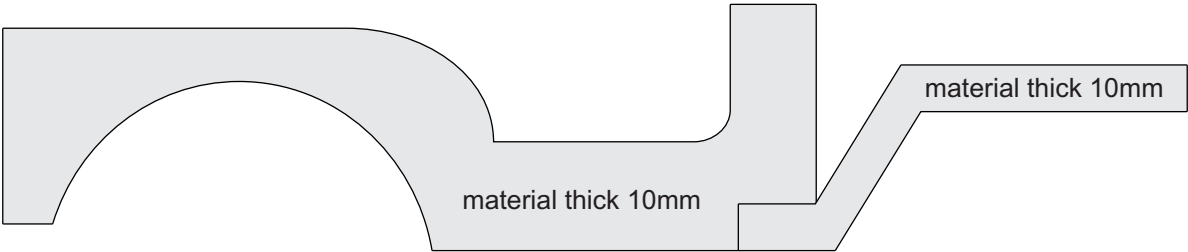

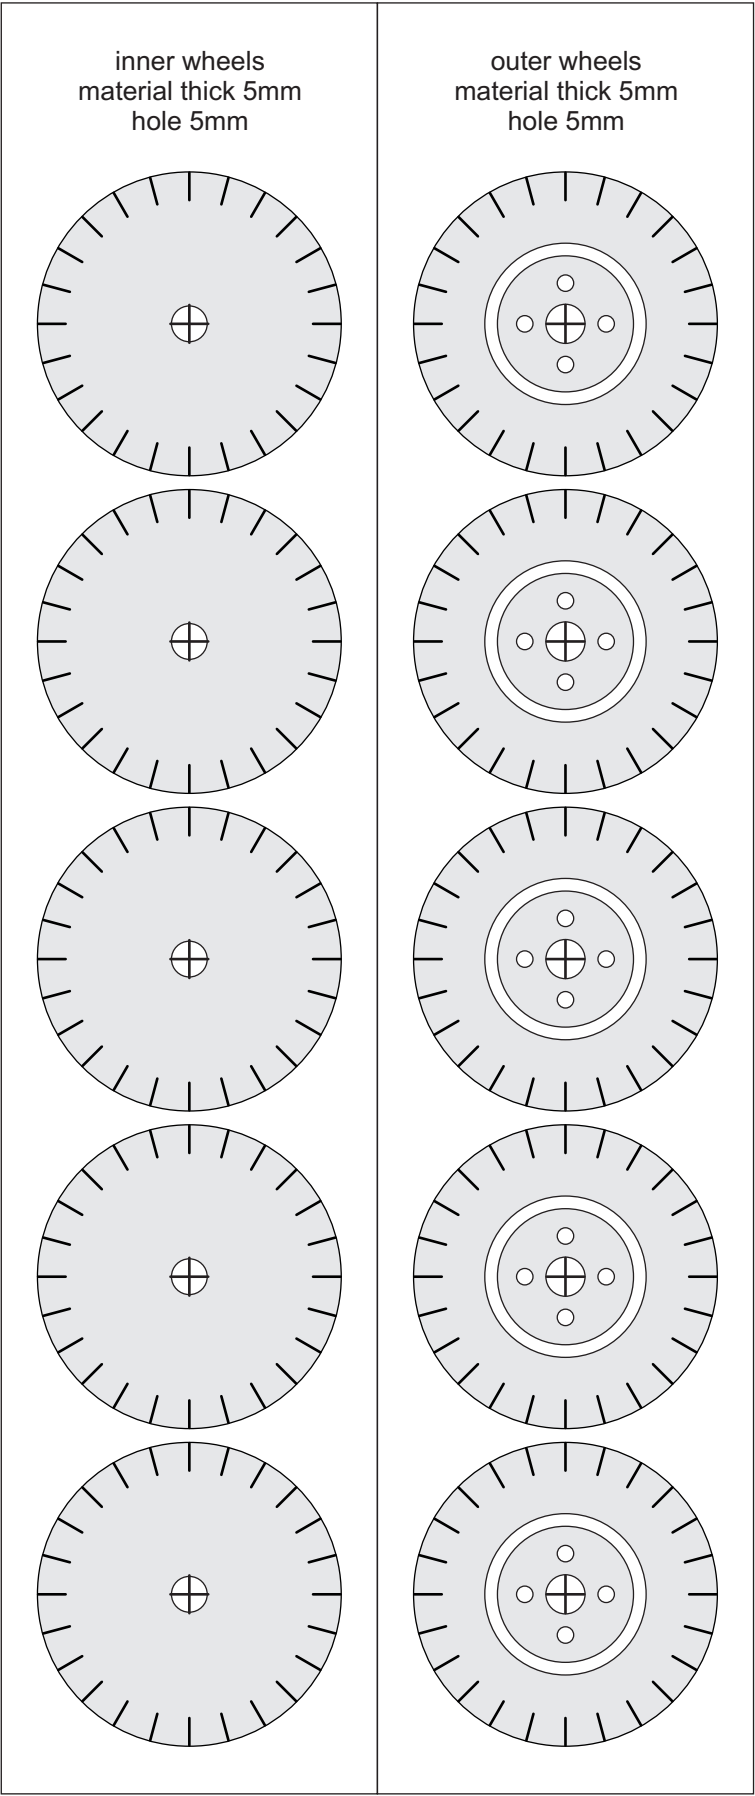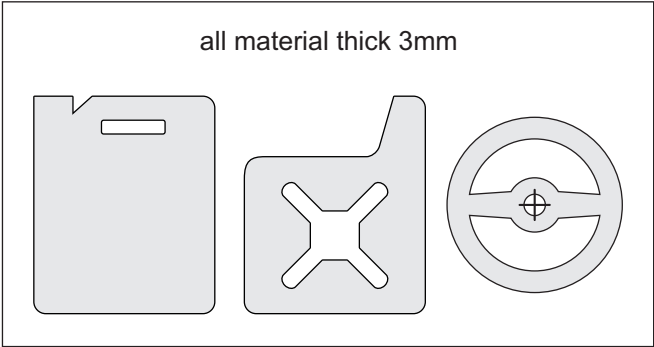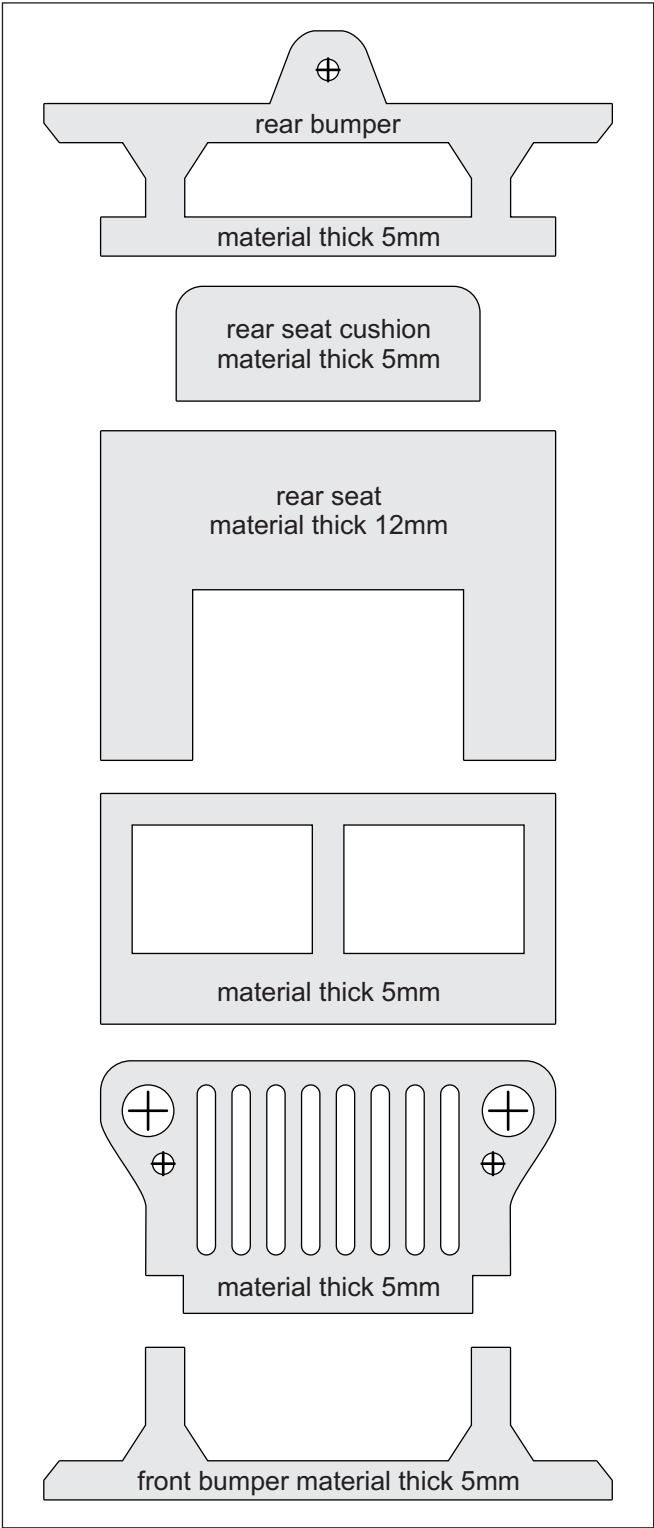

- wheels dowel use 5mm diameter length adjusted
- steering wheel dowel use 3mm diameter length adjusted